



MULTI- SPRAYER™




Owner's Manual

Read this manual for complete instructions

Français - page 15 / Español - página 29

Contents

- | | |
|--------------------------------|-----------------------------|
| 2 Important Safety Information | 9 Cleanup |
| 3 Before You Begin | 10 Reassembly / Maintenance |
| 4 Features | 11 Replacement Parts |
| 5 Setup | 12 Troubleshooting |
| 6 Practice Spraying | 43 Parts List |
| 7 Spraying Technique | 44 Warranty |
| 8 Spraying Troubleshooting | |

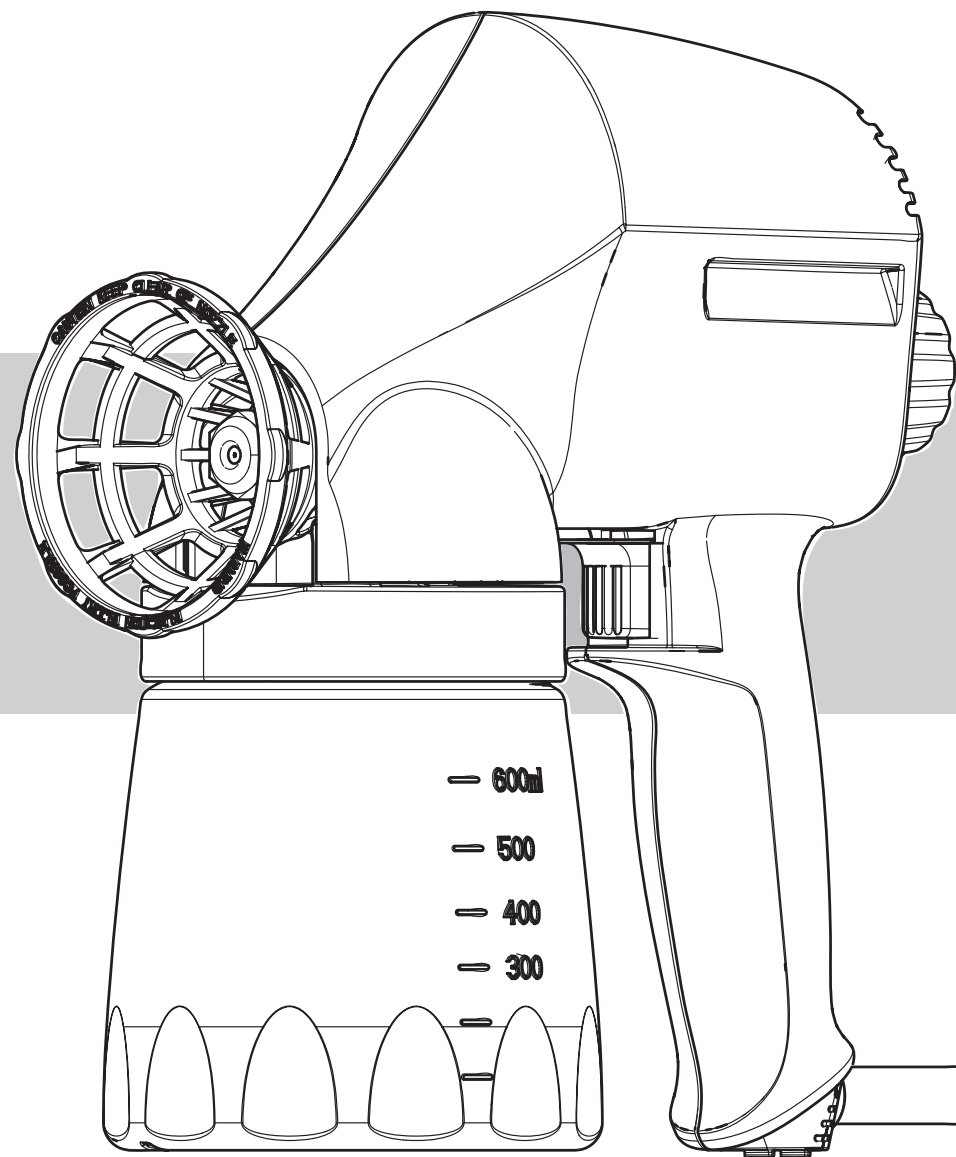

Questions?

Call Wagner Technical Service at:

1-800-328-8251

Register your product online at:

www.wagnerspraytech.com

Proper registration will serve as proof of purchase in the event your original receipt becomes misplaced or lost.

Important Safety Information



Read all safety information before operating the equipment. Save these instructions



Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

- a) **To reduce the risks of fire or explosion, electrical shock and the injury to persons, read and understand all instructions included in this manual. Be familiar with the controls and proper usage of the equipment.**

Grounding Instructions


This product must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with an appropriate grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING - Improper installation of the grounding plug can result in a risk of electric shock.

If repair or replacement of the cord or plug is necessary, do not connect the green grounding wire to either flat blade terminal. The wire with insulation having a green outer surface with or without yellow stripes is the grounding wire and must be connected to the grounding pin.

Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided. If the plug will not fit the outlet, have the proper outlet installed by a qualified electrician.

This product is for use on a nominal 120 volt circuit and has a grounding plug that looks like the plug illustrated below. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.



b) **WARNING - To reduce the risk of fire or explosion:**



1. Do not spray flammable or combustible materials near an open flame, pilot lights or sources of ignition such as hot objects, cigarettes, motors, electrical equipment and electrical appliances. Avoid creating sparks from connecting and disconnecting power cords.
2. For use with only water-based or mineral spirit-type materials with a minimum flash point of 21°C (70° F) — Do not spray or clean with liquids having a flash point of less than 21°C (70° F). Flash point is the temperature at which a fluid can produce enough vapor to ignite.
3. Verify that all containers and collection systems are grounded to prevent static discharge.
4. Connect to a grounded outlet and use grounded extension cords (electric models only). Do not use a 3 to 2 adapter.
5. Do not use a paint or solvent containing halogenated hydrocarbons. Such as chlorine, bleach mildewcide, methylene chloride and trichloroethane. They are not compatible with aluminum. Contact the coating supplier about compatibility of material with aluminum.
6. Keep spray area well ventilated. Keep a good supply of fresh air moving through the area to keep the air within the spray area free from accumulation of flammable vapors. Keep pump assembly in well ventilated area. Do not spray pump assembly.
7. Do not smoke in the spray area.
8. Do not operate light switches, engines, or similar spark producing products in the spray area.
9. Keep area clean and free of paint or solvent containers, rags, and other flammable materials.
10. Know the contents of the paint and solvents being sprayed. Read all Material Safety Data Sheets (MSDS) and container labels provided with the paints and solvents. Follow the paint and solvent manufacture's safety instructions.
11. Fire extinguisher equipment shall be present and working.

c) **WARNING - To reduce the risk of skin injection:**



1. Do not aim the gun at, or spray any person or animal.
2. Keep hands and other body parts away from the discharge. For example, do not try to stop leaks with any part of the body.
3. Always use the nozzle tip guard. Do not spray without the nozzle tip guard in place.
4. Only use a nozzle tip specified by the manufacturer.
5. Use caution when cleaning and changing nozzle tips.
6. High-pressure spray is able to inject toxins into the body and cause serious bodily injury. In the event that injection occurs, seek medical attention immediately.

7. This system is capable of producing 2800 PSI / 193 Bar. Only use replacement parts or accessories that are specified by the manufacturer and that are rated a minimum of 2800 PSI. This includes spray tips, nozzle guards and extensions.
8. Verify that all connections are secure before operating the unit.

d) **WARNING - To reduce the risk of injury:**

1. Always wear appropriate gloves, eye protection, clothing and a respirator or mask when painting. Hazardous vapors — Paints, solvents, insecticides, and other materials can be harmful if inhaled or come in contact with body. Vapors can cause severe nausea, fainting or poisoning.
2. Do not operate or spray near children. Keep children away from equipment at all times.
3. Do not overreach or stand on an unstable support. Keep effective footing and balance at all times.
4. Stay alert and watch what you are doing.
5. Do not operate the unit when fatigued or under the influence of drugs or alcohol.

e) **WARNING - To reduce the risk of electric shock:**



1. Keep electrical cord plug and spray gun trigger free from paint and other liquids. Never hold cord at plug connections to support cord. Failure to observe may result in an electrical shock.
2. Never immerse electrical parts in water or any other liquid. Wipe the exterior of the sprayer with a damp cloth for cleaning. Always make sure the sprayer is unplugged before taking it apart for cleaning.

Important Electrical Information

IMPORTANT: Use only a 3-wire extension cord that has a 3-blade grounding plug and a 3-slot receptacle that will accept the plug on the product. Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. For lengths less than 50 feet, use a No. 18 AWG extension cord. For lengths more than 50 feet, use a No. 14 or No. 16 AWG extension cord. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating.

Wagner Spray Tech accessory extension cords recommended:

P/N 0090241	20 foot extension cord
P/N 0090242	35 foot extension cord

Before you begin:

This page contains information that is necessary in order to operate the sprayer properly.

Material Preparation:

- It is important to mix the material thoroughly before you begin. Do not shake the material to mix it. Always stir the material gently but thoroughly before use.
- Remove any skin that has formed on the top of the material. Do not mix the skin into the material. The skin can break up and clog the sprayer. Older paint may need to be strained.

Thinning the Material:

- Always test spraying without thinning the material as thinning is not typically required.
- If you are spraying with a material that needs to be thinned, make sure to follow the manufacturer's recommendations.

Material That Can Be Sprayed:

- Make sure the type of paint you use can be cleaned with either mineral spirits (for oil-based paints) or a warm water and soap solution (for latex paints).

Overspray:

Some sprayed materials create a cloud of paint. Some of that cloud will spray past your intended object and also bounce off of it. Wind and air currents may cause this cloud to drift onto surfaces not intended to be sprayed. You can control the amount of overspray and bounce-back by adjusting your spray controls and moving the sprayer closer to the work piece, but always make sure that you have a good spray pattern. Always test your pattern on a scrap piece of wood or cardboard, and make sure that you have drop cloths protecting anything not being sprayed.

Anything you don't want painted that is in the area of your spraying surface should be covered or removed.

Drop Cloths:

Be sure to protect your floors and furnishings with drop cloths or other coverings during spraying and cleanup.








Capability:

Sprays a variety of paints (oil-based and latex), primers, stains, preservatives and other nonabrasive materials. Do not use materials with flash points below 70° F (21° C).

Do not use!

This pump should not be used with textured materials, block filler, lacquers, industrial enamels, or asphalt sealer or materials containing HHC. See coating supplier if flash point is not listed on the container.

Features

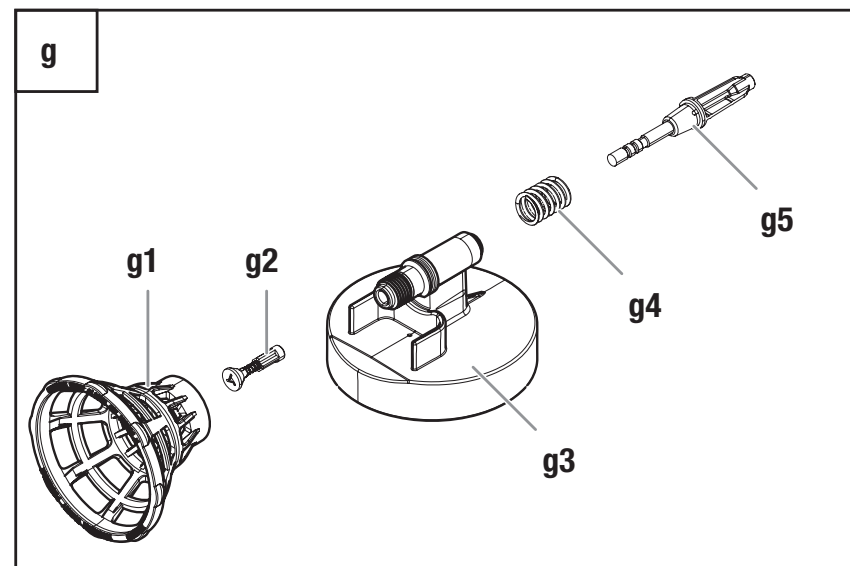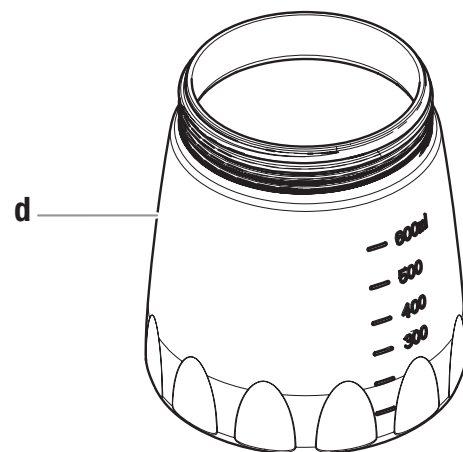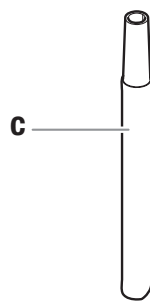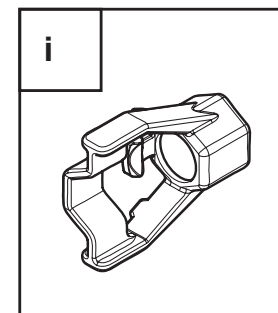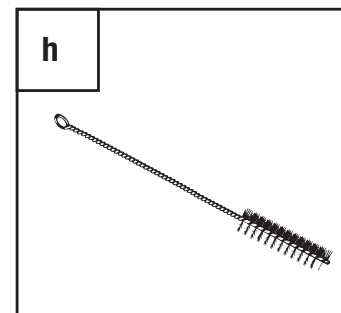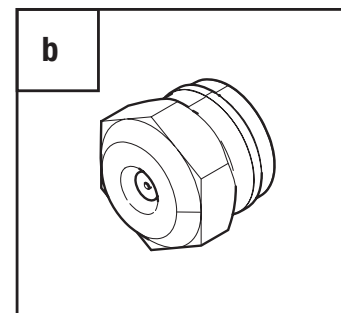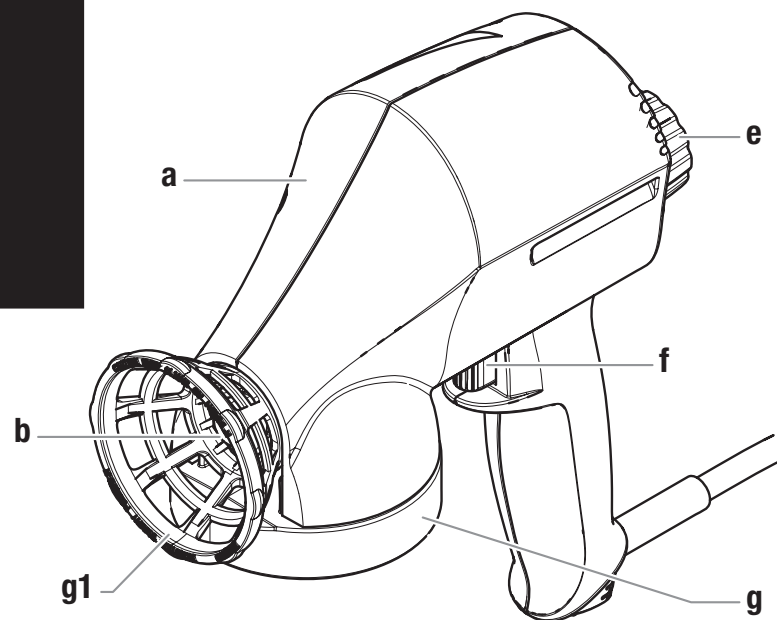

Features

a	Sprayer
b	Spray tip
c	Suction tube
d	1 quart container
e	Flow control knob
f	Trigger
g	Pump assembly
g1	Locking nut
g2	Atomizer valve (2)
g3	Pump housing
g4	Spring
g5	Piston
h	Cleaning brush
i	Spray tip removal tool


Setup

Start You will need:


- Household oil

Note: The cup will give you approximately 3-5 minutes of continuous spraying time.


IMPORTANT: Avoid running the cup dry. An empty cup will allow air to become sucked into the sprayer, which leads to globbing and spitting.

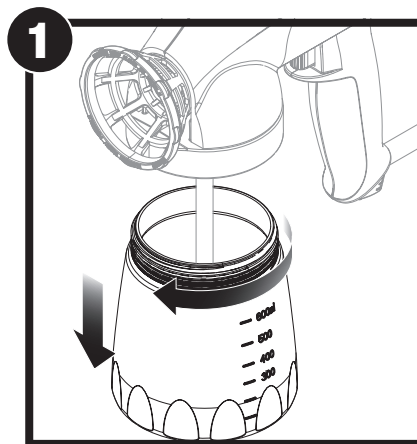


1. Remove the cup.

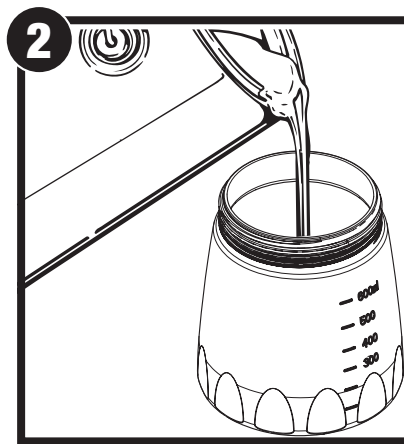

2. Fill the container with the material to be used.

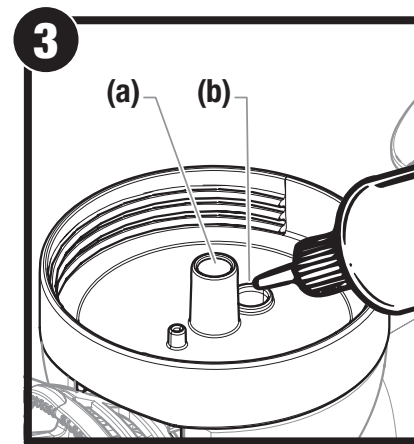


3. Place a few drops of household oil down the intake (a) and return openings (b) in the pump housing.

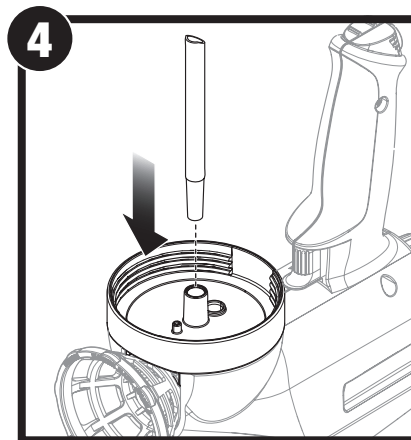

4. Insert the suction tube into the intake opening.

Note: Make sure the suction tube is inserted as far as it will go to ensure a tight fit.

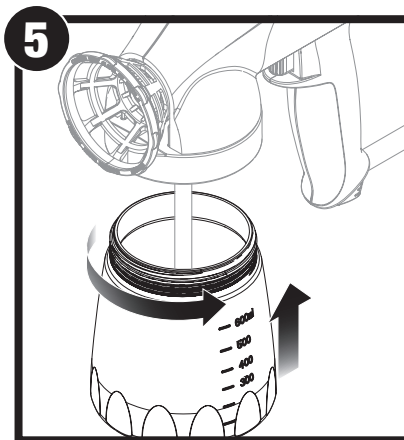

5. Thread the container securely to the sprayer. Plug in the sprayer.

Practice Spraying

Start You will need:

- a scrap piece of wood or cardboard

Important - read before spraying

Priming the Sprayer

Once you are ready to spray, it may take 20 seconds for material to spray after you pull the trigger.

The sprayer may sound choppy, while at the same time spit or spray large globs briefly prior to the spray coming out in a fine mist. This is normal.

Keep holding the trigger and material will come from the sprayer in a fine mist.

Overspray


Some sprayed materials create a cloud of paint. Some of that cloud will spray past your intended object and also bounce off of it. Wind and air currents may cause this cloud to drift onto surfaces not intended to be sprayed. You can control the amount of overspray and bounce-back by adjusting your material select control and moving the sprayer closer to the work piece, but always make sure that you have a good spray pattern. Always test your pattern on a scrap piece of wood or cardboard, and make sure that you have drop cloths protecting anything not being sprayed.

Anything you don't want painted that is in the area of your spraying surface should be covered or removed.


Flow Control Knob

The spray pattern is controlled by the Flow Control Knob on the rear of the sprayer, and by the thickness of the material being sprayed.


Turning the flow knob **counterclockwise** increases the amount of material flow. Turning the flow knob **clockwise** decreases the amount of material flow.

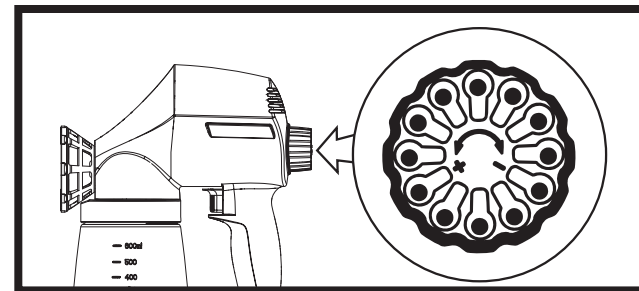


Practice Spraying

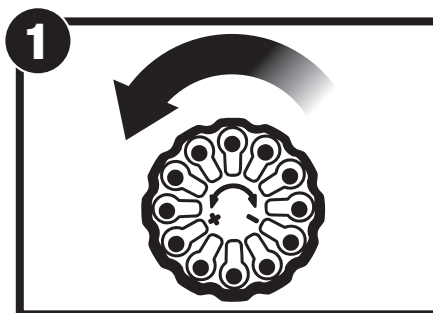


1. Turn the flow knob fully counterclockwise to maximum.

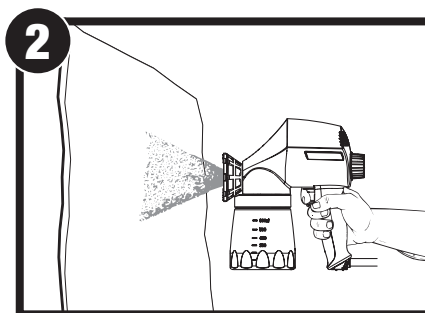

2. Point the sprayer at a scrap piece of wood or cardboard, and pull the trigger to prime the sprayer. Release trigger when material sprays evenly from the spray gun.

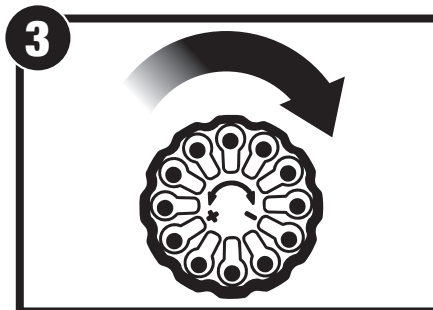

3. Turn the flow knob clockwise until you have a good spray pattern.

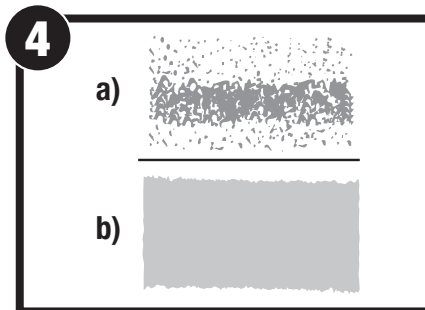

4. A poor spray pattern (a) will concentrate the paint in the center of the spray pattern and go on blotchy.
A good spray pattern (b) has an even amount of material throughout the pattern and will go on smoothly.

Notes:


- Always practice spraying on a piece of scrap wood or cardboard to test your spray pattern.
- If you adjust the flow knob and still cannot get a good pattern, you may need to thin the material you are using. Always test spraying without thinning the material. Thin as required to achieve optimum spraying performance (refer to #4).
- If you are spraying a material that needs to be thinned, make sure to follow the manufacturer's recommendations.

Spraying Technique


Start Before you begin:



Never tip the sprayer at more than a 45° angle when spraying overhead. Material could get into the motor housing and cause an electric shock.

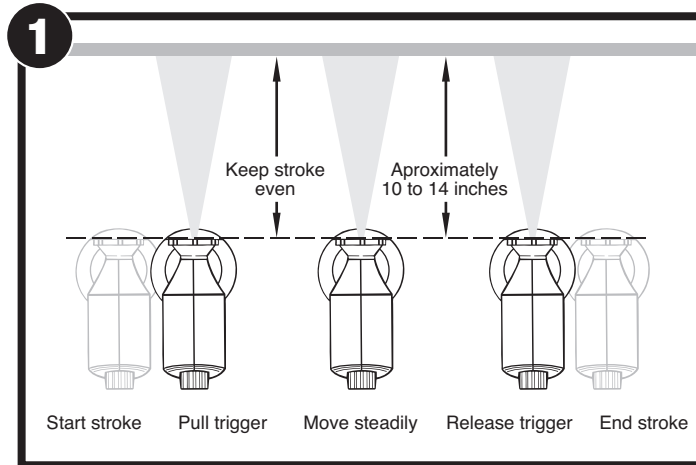

1. Keep your arm moving at constant speed and keep the sprayer at a constant distance from the surface. The sprayer should be triggered at the beginning of the stroke and released at the end of the stroke.

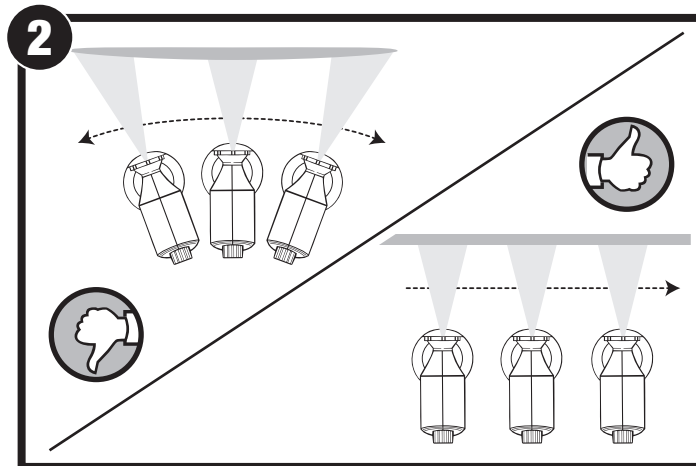

2. Keep the sprayer at a consistent distance to the surface. This means moving your entire arm back and forth rather than just flexing your wrist. Overlap each stroke by 50%.

Spraying Troubleshooting


Start

Notice:

Material “spitting” will occur any time you introduce air to the system, such as during refilling. When spitting occurs, paint will spray in large globs instead of a fine mist.


The following are some common causes of spitting.

Material spitting

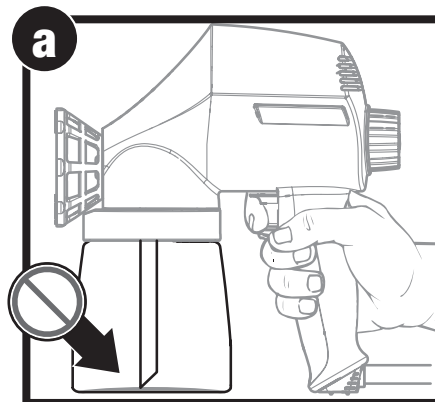


a. An empty container.

RECOMMENDATION: Be sure to maintain sufficient levels of spraying material in the material container.

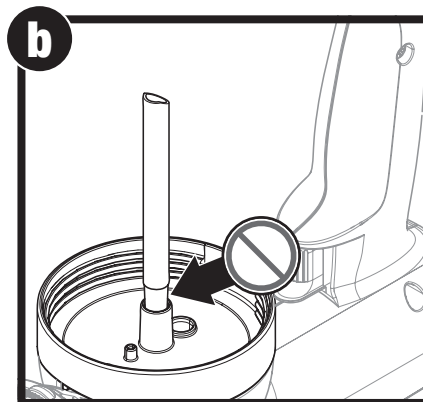

b. A suction tube that is not fully inserted into the intake opening.

RECOMMENDATION: Firmly install the suction tube into the intake opening.

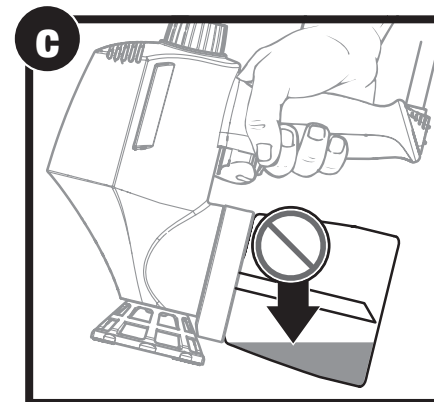


c. Tipping the sprayer too far in one direction.


RECOMMENDATION: Keep your arm even and steady when spraying. Adjust the spray tip to change spraying direction.

Material leaking


IMPORTANT: If material is leaking from the threads of the spray tip, turn off the sprayer immediately or the sprayer could be damaged. The sprayer will leak from behind the spray tip if the atomizer valve is not seated properly. If you notice material leaking from this area, follow the steps below.

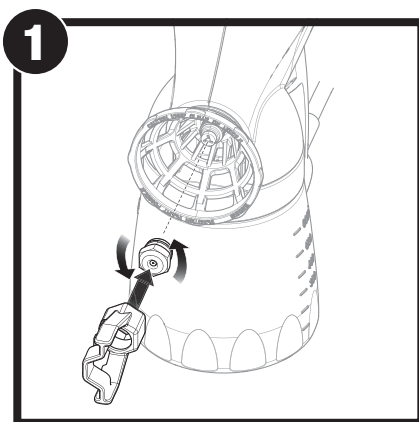


1. **Unplug immediately.**
Using the spray tip tool, remove the spray tip by turning it counterclockwise.

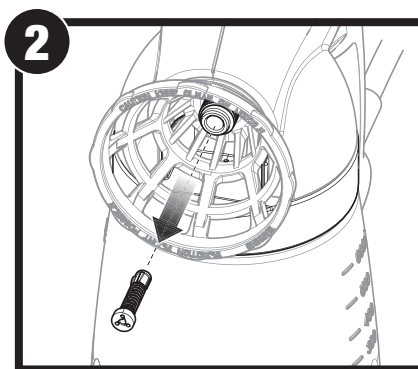

2. Remove the atomizer valve and see if it needs to be cleaned or replaced (**see page 11**). Also check the pump housing opening for any dirt or other obstruction and clean if necessary.

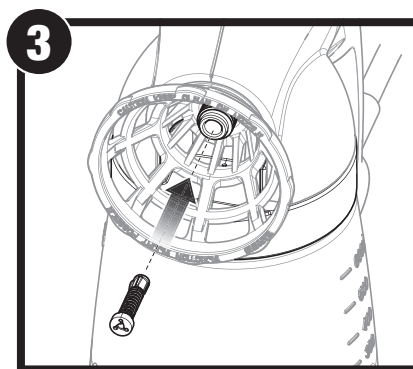

3. Put the atomizer valve back in place, making sure it can seat properly without any obstruction.

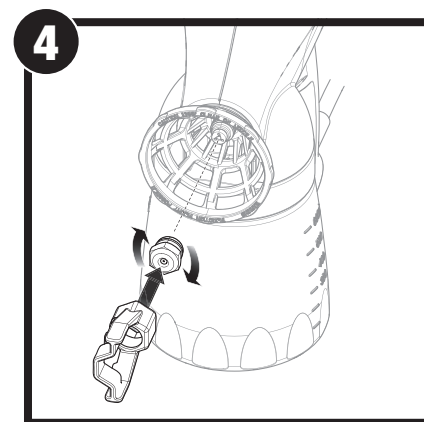

4. Using the spray tip tool, thread on the spray tip by turning it clockwise, and tighten firmly.

Cleanup

Start You will need:

- Waste container
- Warm soapy water if you sprayed latex materials
- Mineral spirits if you sprayed oil-based materials




Make sure you clean the sprayer in a well-ventilated area whenever cleaning with flammable solvents.




The sprayer contains electrical parts. DO NOT submerge the sprayer into any liquids.




1. Unplug the sprayer. Pour the remaining material back into the original container. Rinse the inside of the cup with the appropriate cleaning solution.

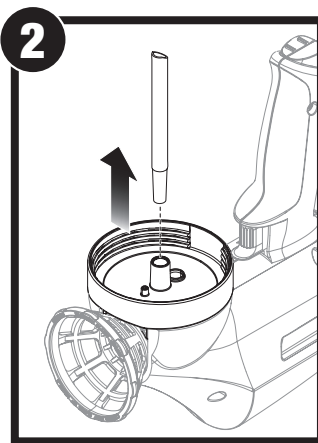


2. Remove the suction tube.

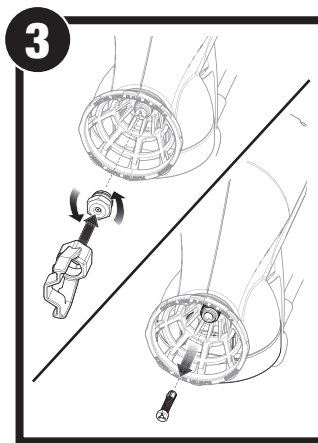


3. Using the spray tip tool, remove the spray tip by turning it counterclockwise. Pull the atomizer valve out, being careful not to lose it.

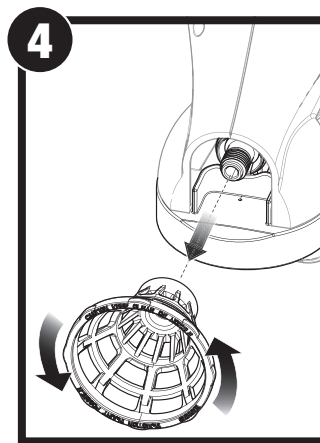


4. Turn the locking nut counterclockwise until it is removed.

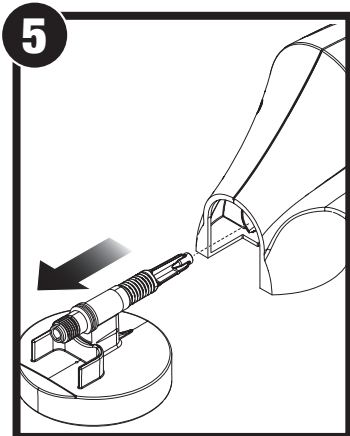


5. Slide the pump housing off the sprayer.

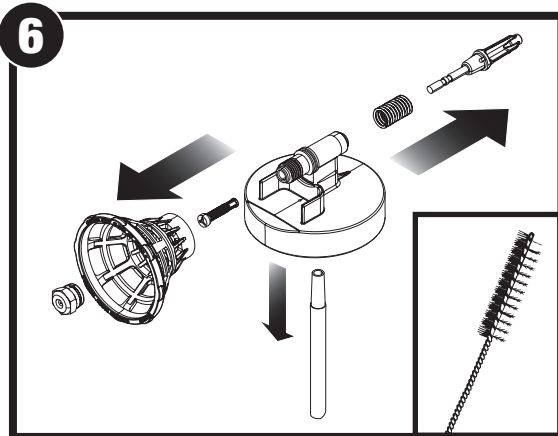

6. Remove all parts from the pump housing assembly. Clean all parts thoroughly with the brush provided using a solution appropriate to the type of material you sprayed.

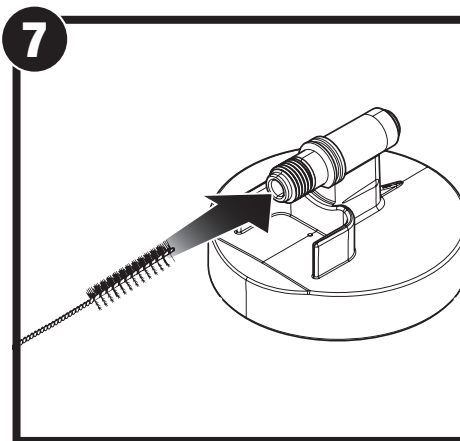

7. **IMPORTANT:** Make sure to completely remove all material from the inside of the piston chamber by scrubbing with the brush. Even a small amount of material can dry like glue and keep the piston from moving, causing damage to the sprayer.

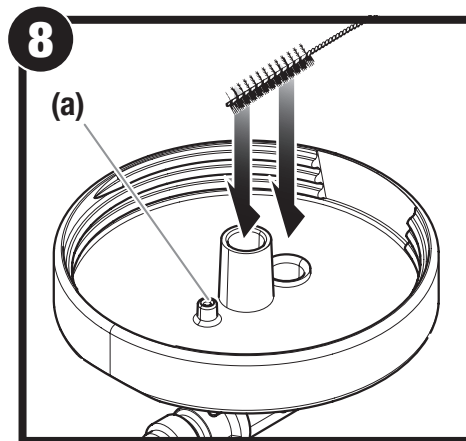


8. **IMPORTANT:** Make sure to keep the vent hole (a) on the pump housing clean and unblocked or a vacuum can build up in the container and cause damage to the sprayer. A toothpick or straightened paper clip can be used to clean it.

Reassembly / Maintenance


Start

You will need:


- Scrap piece of wood or cardboard
- Household oil

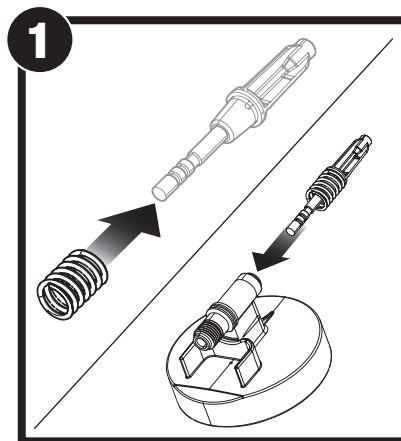

1. Slide the spring onto the front end of the piston.
Insert the piston into the back of the pump housing.

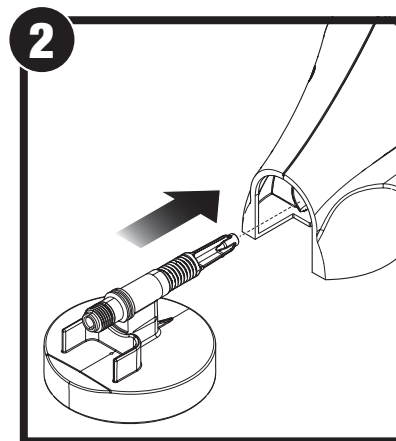


2. Insert the pump housing assembly into the front of the sprayer.

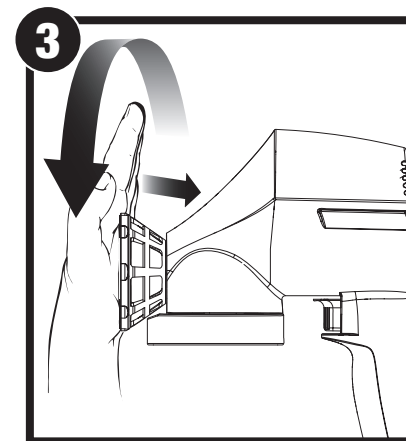


3. Place the locking nut onto the pump housing. Press in while turning the locking nut clockwise.


Do not cross-thread the locking nut. Make certain it is threaded correctly before tightening.

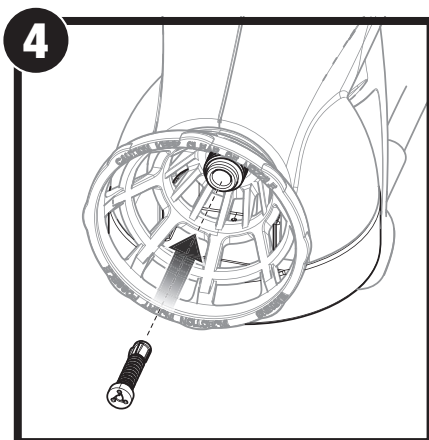


4. Insert the atomizer valve into the front end of the pump housing.
Place the spray tip onto the pump housing and turn it clockwise until it is tightened securely.

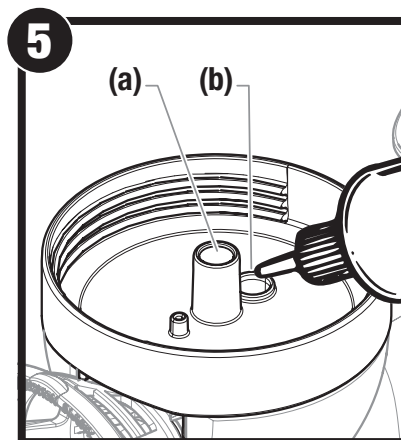

5. Turn the sprayer upside-down while the cup is removed.
Squeeze a small amount of household oil into both the intake (a) and return (b) openings on the pump housing.

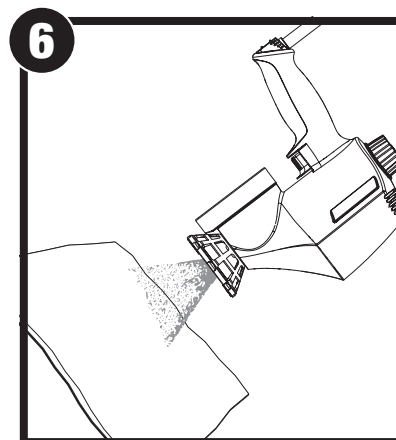

6. Plug in the sprayer. Aim at piece of scrap wood or cardboard and squeeze the trigger of the sprayer for 2 to 3 seconds while sprayer is still inverted.

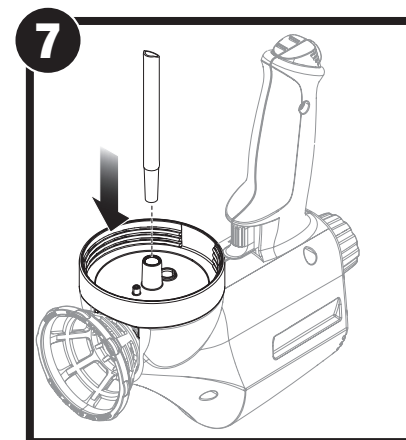

7. Reassemble and reattach the suction tube.
Replace the cup.

Replacement parts

Start Notice:


Parts of your sprayer wear out with use and require regular replacement. They include the atomizer valve, piston and spring. These parts are not covered by your sprayer warranty.

More abrasive materials such as latex paints and stains cause these parts to wear out faster than less abrasive materials such as oil-based paints and stains, thin stains and sealers.

Atomizer valve:

The atomizer valve is shaped to cause the material to spin as it comes out of the sprayer. The spinning breaks the material up into a fine spray. As more material goes through the atomizer valve, it wears out the valve and the shape of the valve changes. When it changes too much to produce a good spray pattern, the valve needs to be replaced.

- 1 Front view of a good swirl valve.
- 2 Front view of a swirl valve after spraying 7-10 gallons of latex paint. Replace.
- 3 Front view of a swirl valve after spraying 7-10 gallons of latex stain. Replace.

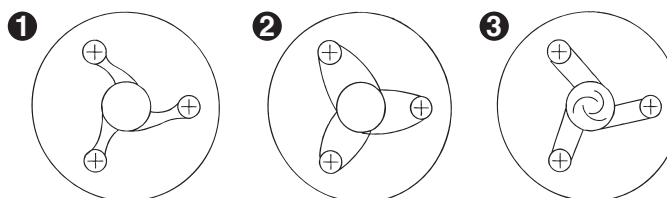

Piston and Spring:

The average life of a piston and spring will vary depending on the types of material being sprayed.

Replace the piston if the sprayer takes longer than 20 seconds with the suction tube to prime when well lubricated, or if there is an excess amount of material leaking, refer to the troubleshooting suggestions listed in this manual. Replace the spring if you notice that it is broken when you clean the sprayer.

To replace either the atomizer valve or the piston and spring, follow the Cleanup instructions on page 9, and replace the old parts with new ones. When replaced, follow Reassembly / Maintenance instructions, page 10.

Troubleshooting



Any attempt to open the motor housing or repair any electrical parts within the unit by anyone other than an authorized repair technician could cause serious injury and will void the warranty.

Problem A: Motor will not run

Cause	Solution
1. No power at wall outlet. Electrical problem or defective motor.	Try new wall outlet. Take to Authorized Service Center for repair.

Problem B: Motor has a low hum and does not spray

Cause	Solution
1. Control knob turned in too far	Turn control knob counterclockwise
2. Seized piston	Disassemble sprayer, clean and lubricate (follow Cleanup instructions)

Problem C: Motor operates properly but does not spray

Cause	Solution
1. Failure to prime with suction tube	Oil intake opening (see Reassembly / Maintenance section). Hold trigger for at least 20 seconds. Thin paint.
2. Control knob needs adjusting	Adjust
3. Loose or damaged suction tube	Tighten or replace
4. Plugged or worn atomizer valve	Clean or replace as needed
5. Atomizer valve missing	Replace atomizer valve
6. Plugged spray tip	Clean tip
7. Filter assembly plugged	Clean filter assembly
8. Material too thick	Thin material
9. Worn piston	Clean and oil, or replace

Problem D: Material spitting or globbing (air has entered the system)

Cause	Solution
1. Low on paint	Refill container
2. Material too thick	Thin material
3. Loose suction tube is drawing in air	Clean and insert firmly into intake opening on pump housing
4. Worm atomizer valve	Replace atomizer valve
5. Worn spray tip	Replace if worn
6. Control knob needs adjusting	Adjust
7. Worn piston	Clean and oil, or replace
8. Material too thick	Thin material

Troubleshooting

Problem E: Excessive fogging

Cause		Solution
1.	Pressure too high	Turn flow control knob clockwise to reduce pressure and flow
2.	Holding sprayer too far from work surface	Hold sprayer closer to work surface

Problem F: Runs and sags in paint

Cause		Solution
1.	Arm movement too slow, holding spray gun too close or work surface, or applying too much paint at one time	See section on spraying (page 7)

Problem G: Material drips from spray tip or guard

Cause		Solution
1.	Guard is for safety and cannot be removed. Some dripping is unavoidable with some paints	Use a small brush on drips that fall on surface being sprayed. Use a drop cloth

Problem H: Material leaking from between spray tip and locking nut.

Cause		Solution
1.	Spray tip is loose	Tighten securely
2.	Atomizer valve not positioned properly	Unplug the sprayer, remove the spray tip and reposition the atomizer valve
3.	Worn atomizer valve	Replace
4.	Eroded pump housing	Replace the pump housing

Problem I: Motor overheats

Cause		Solution
1.	Seized piston	Clean piston
2.	Extension cord too long	Replace with proper size
3.	Operating continuously	Release trigger at the end of a pass, allow to cool.



Have you tried the recommendations above and are still having problems? In the United States, to speak to a customer service representative, call our Customer Service at 1-800-328-8251 Monday through Friday between 8:00 AM and 4:30 PM Central time.



This unit has no servicable electrical parts. Do not attempt to service this unit yourself.

Questions?

Call Wagner Technical Service at:


1-800-328-8251

Register your product online at:

www.wagnerspraytech.com

Proper registration will serve as proof of purchase in the event your original receipt becomes misplaced or lost.

Parts List • Liste de pièces • Lista de piezas

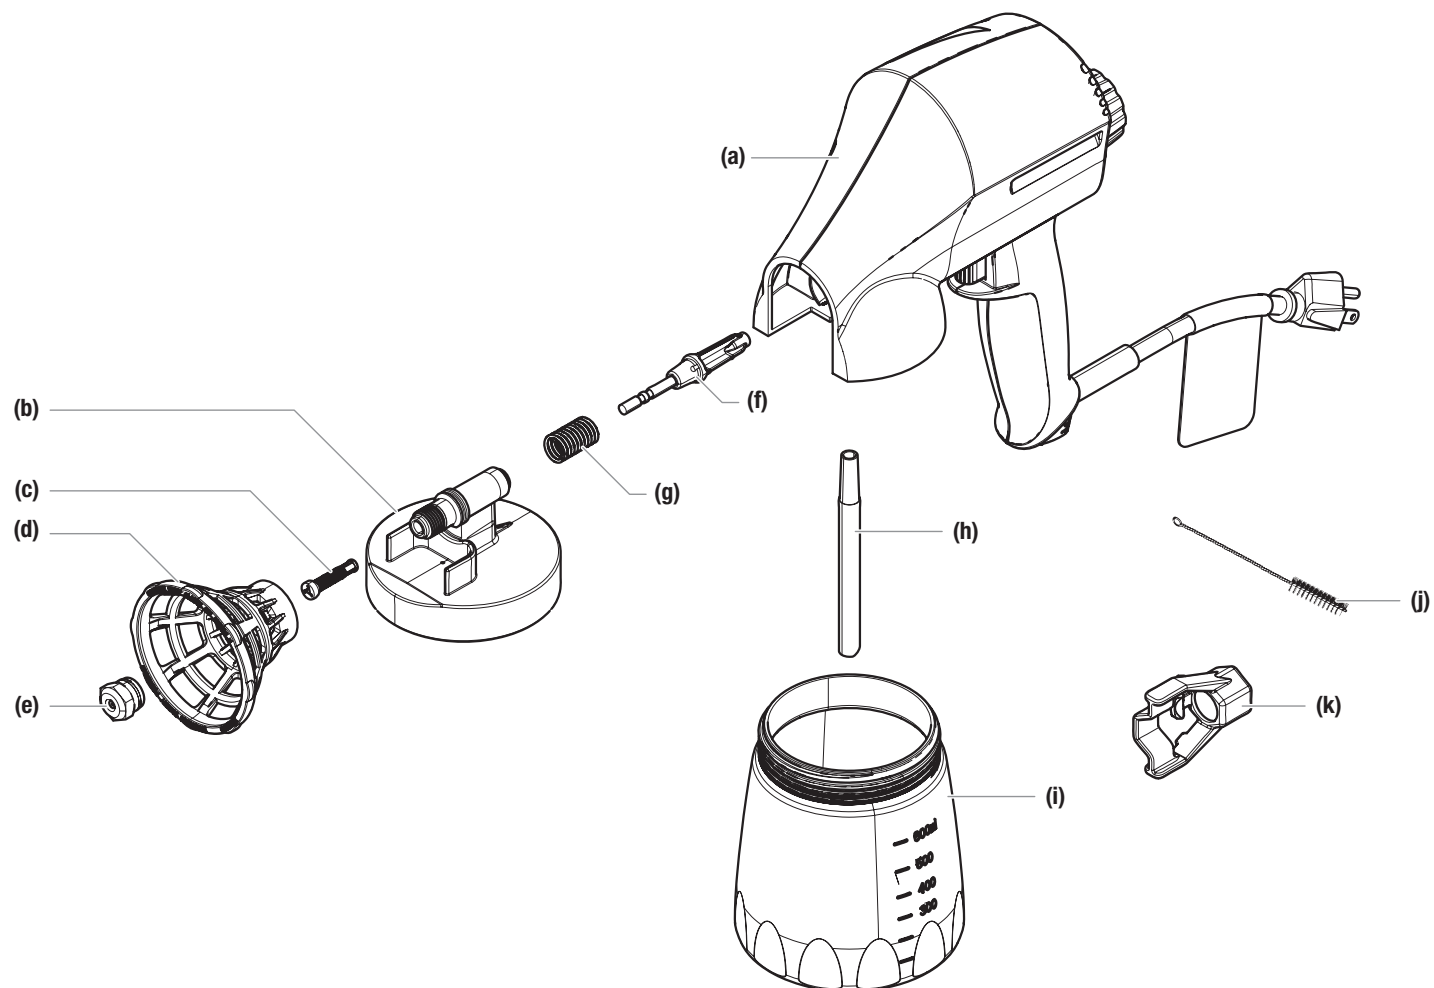

Parts List • Liste de pièces • Lista de piezas

Item Article Artículo	Part No. N° de pièce Pieza No.	English Description	Français Description	Español Descripción	Quantity Quantite Cantidad
a)	-----	Sprayer assembly	Pulvérisateur	Rociador	1
b)	0500269	Pump housing	Corps de pompe	Caja de la bomba	1
c)	0500173	Atomizer valve	Soupape atomiseur	Válvula de atomización	2
d)	0500586	Lock nut	Bague de blocage	Tuerca del émbolo	1
e)	0500276	Spray tip	Buse à pulvériser	Punta de rociadora	1
f)	0198207	Piston	Piston	Émbolo	1
g)	0500408	Spring	Ressort	Resorte	1
h)	0413305	Suction tube	Tube d'aspiration	Tubo de succión	1
i)	0414313	Material container	Réservoir de liquide	Contenedor de fluido	1
j)	0514209	Cleaning brush	Brosse de nettoyage	Cepillo de limpieza	1
k)	0199327	Spray tip removal tool	Outil de buse	Herramienta de punta	1

WAGNER ONE-YEAR LIMITED WARRANTY - Keep on File

This product, manufactured by Wagner Spray Tech Corporation (Wagner) is warranted against defects in material and workmanship for one year following date of purchase if operated in accordance with Wagner's printed recommendations and instructions. This warranty does not cover damage resulting from improper use, accidents, user's negligence or normal wear. This warranty does not cover any defects or damages caused by service or repair performed by anyone other than a Wagner Authorized Service Center.

ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO ONE YEAR FOLLOWING DATE OF PURCHASE. THIS PRODUCT IS DESIGNED FOR HOME USAGE ONLY. IF USED FOR COMMERCIAL OR RENTAL PURPOSES, THIS WARRANTY APPLIES ONLY FOR 30 DAYS FROM DATE OF PURCHASE. WAGNER SHALL NOT IN ANY EVENT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, WHETHER FOR BREACH OF THIS WARRANTY OR ANY OTHER REASON. THIS WARRANTY DOES NOT APPLY TO ACCESSORIES.

If any product is defective in material and/or workmanship during the applicable warranty period, return it with proof of purchase, transportation prepaid, to any Wagner Authorized Service Center. (A listing of Service Center locations is enclosed with this product.) Wagner's Authorized Service Center will either repair or replace the product (at Wagner's option) and return it to you, postage prepaid.

Spray Tip Lifetime Warranty

The spray tip you have purchased with your Wagner Power Painter is warranted against wear for the life of the Power Painter. The spray tip warranty does not cover damage resulting from improper use, accidents or user's negligence.

If the spray tip fails due to wear, return it, postage prepaid, to Wagner Spray Tech Corporation, Spray Tip Replacement, 1770 Fernbrook Lane, Plymouth, MN 55447. Please include your name, complete address and telephone number with the spray tip. Allow 6 to 8 weeks for delivery.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION AND EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

GARANTIE LIMITÉE D'UN AN - À conserver

Ce produit, fabriqué par Wagner Spray Tech Corporation (Wagner), est garanti contre les défauts de matériaux et de fabrication pendant un an suivant la date d'achat, s'il est utilisé conformément aux recommandations et directives imprimées par Wagner. Cette garantie ne couvre pas les dégâts qui résulteraient d'une mauvaise utilisation, les accidents, la négligence de l'utilisateur ou l'usure normale. Cette garantie ne couvre aucun dégât dû des opérations de maintenance effectuées par tout autre qu'un réparateur approuvé par Wagner.

TOUTE GARANTIE IMPLICITE DE QUALITÉ MARCHANDE OU DE CONFORMITÉ À UN USAGE PARTICULIER EST LIMITÉE À UN AN À PARTIR DE LA DATE D'ACHAT. CE PRODUIT N'EST CONÇU QUE POUR UNE UTILISATION PRIVÉE. DANS LE CAS DE LOCATION OU AUTRES APPLICATIONS PROFESSIONNELLES, CETTE GARANTIE SE LIMITE À 30 JOURS À PARTIR DE LA DATE D'ACHAT. WAGNER NE POURRA EN AUCUN CAS ÊTRE TENUE RESPONSABLE DE DOMMAGES-INTÉRÊTS INDIRECTS OU CONSÉCUTIFS, QUE CE SOIT POUR UNE RUPTURE DE CETTE GARANTIE OU TOUTE AUTRE RAISON. CETTE GARANTIE NE S'APPLIQUE PAS AUX ACCESSOIRES

Si un produit est défectueux, au niveau des matériaux ou de la fabrication, au cours de la durée applicable de la garantie, le renvoyer avec une preuve d'achat, port payé, à l'un des centres de service autorisé par Wagner. (Une liste des adresses de ces centres accompagne tous les produits). Le centre de service autorisé réparera ou remplacera le produit (au choix de Wagner) et le renverra, port payé, et utilisateur.

Garantie à vie de le buse du pulvérisateur

Le buse livré avec ce produit Wagner est garanti contre l'usure pour toute la durée utile de l'appareil. Cette garantie ne couvre pas les dégâts résultant d'une mauvaise utilisation du produit, d'accidents ou d'une négligence de l'utilisateur.

Si le buse du pulvérisateur s'use, le renvoyer, port payé, à Wagner Spray Tech Corporation, Spray Tip replacement, 1770 Fernbrook Lane Plymouth, Minnesota 55447 (USA). Prière de joindre le nom, l'adresse et le numéro de téléphone de l'utilisateur. Compter un délai de livraison de 6 à 8 semaines.

CERTAINS ÉTATS OU PROVINCES NE PERMETTENT PAS LA LIMITATIONS DE LA DURÉE DE LA GARANTIE IMPLICITE OU L'EXCLUSION DES DOMMAGES-INTÉRÊTS INDIRECTS OU ACCESSOIRES, LES RESTRICTIONS APPARAÎSSANT AUX PRÉSENTES POURRAIT DONC NE PAS S'APPLIQUER À UTILISATEUR.

LA PRÉSENTE GARANTIE CONFÈRE DES DROITS PRÉCIS À UTILISATEUR, MAIS CELUI-CI POURRAIT AVOIR D'AUTRES DROITS EN VERTU DES LÉGISLATIONS LOCALES.

GARANTÍA LIMITADA POR UN AÑO - Manténgala archivada

Este producto, fabricado por Wagner Spray Tech Corporation (Wagner), está garantizado contra defectos de materiales y de mano de obra por un año a partir de la fecha de compra, si se utiliza de acuerdo con las instrucciones y recomendaciones especificadas por Wagner. Esta garantía no cubre daños producidos por uso indebido, accidentes, negligencia del usuario o desgaste normal del producto. Tampoco cubre defectos o daños producidos por reparaciones o mantenimiento no realizados por un Centro de servicio autorizado de Wagner.

CUALQUIER GARANTÍA IMPLÍCITA DE COMERCIALIZACIÓN O DE BUEN ESTADO PARA PROPOSITOS ESPECÍFICOS ESTÁ LIMITADA POR UN AÑO A PARTIR DE LA FECHA DE COMPRA. ESTE PRODUCTO SOLO HA SIDO DISEÑADO PARA USO DOMÉSTICO. SI SE LE DA USO PROFESIONAL Y DE RENTA, ESTA GARANTÍA TIENE UNA DURACIÓN DE 30 DÍAS A PARTIR DE LA FECHA DE COMPRA. BAJO NINGUNA CIRCUNSTANCIA WAGNER SE RESPONSABILIZARÁ POR CUALQUIER DAÑO ACCIDENTAL O COMO CONSECUENCIA DEL USO DEL PRODUCTO, YA SEA POR LA VIOLACIÓN DE ESTA GARANTÍA O POR CUALQUIER OTRA RAZÓN. ESTA GARANTÍA NO INCLUYE LOS ACCESORIOS.

Si cualquier producto presentara defectos de materiales y/o de mano de obra durante el período válido, devuélvalo con el recibo de compra y el flete pagado a cualquier Centro de servicio autorizado de Wagner (este producto viene con una lista de los Centros de servicio). El Centro de servicio autorizado de Wagner reparará o reemplazará el producto (de acuerdo a su criterio) y se lo devolverá haciendo uso de los gastos de flete ya pagados.

Garantía vitalicia de la punta rociadora

La punta rociadora que usted ha adquirido con su equipo rociador de pintura Wagner está garantizada contra desgaste por el tiempo que dure su rociador. La garantía de la punta no cubre daños producidos por uso indebido, accidentes o negligencia del usuario.

Si la punta falla, debido a desgaste, devuélvala con franqueo pagado a Wagner Spray Tech Corporation, Spray Tip Replacement, 1770 Fernbrook Lane, Plymouth, Minnesota 55447. Por favor, junto con la punta, incluya su nombre, su dirección completa y su número de teléfono. La punta se le devolverá en de 6 a 8 semanas.

ALGUNOS ESTADOS NO PERMITEN LIMITACIONES DE TIEMPO A LAS GARANTÍAS IMPLÍCITAS NI TAMPOCO LA EXCLUSIÓN DE DAÑOS ACCIDENTALES O COMO CONSECUENCIA DEL USO DEL PRODUCTO, POR LO QUE ES POSIBLE QUE LA LIMITACIÓN ANTERIOR NO SE APLIQUE A SU CASO PARTICULAR.

ESTA GARANTÍA LE OTORGA CIERTOS DERECHOS LEGALES ESPECÍFICOS Y TAMBIÉN PUEDE ACCEDER A OTROS DERECHOS QUE VARIAN DE UN ESTADO A OTRO.